
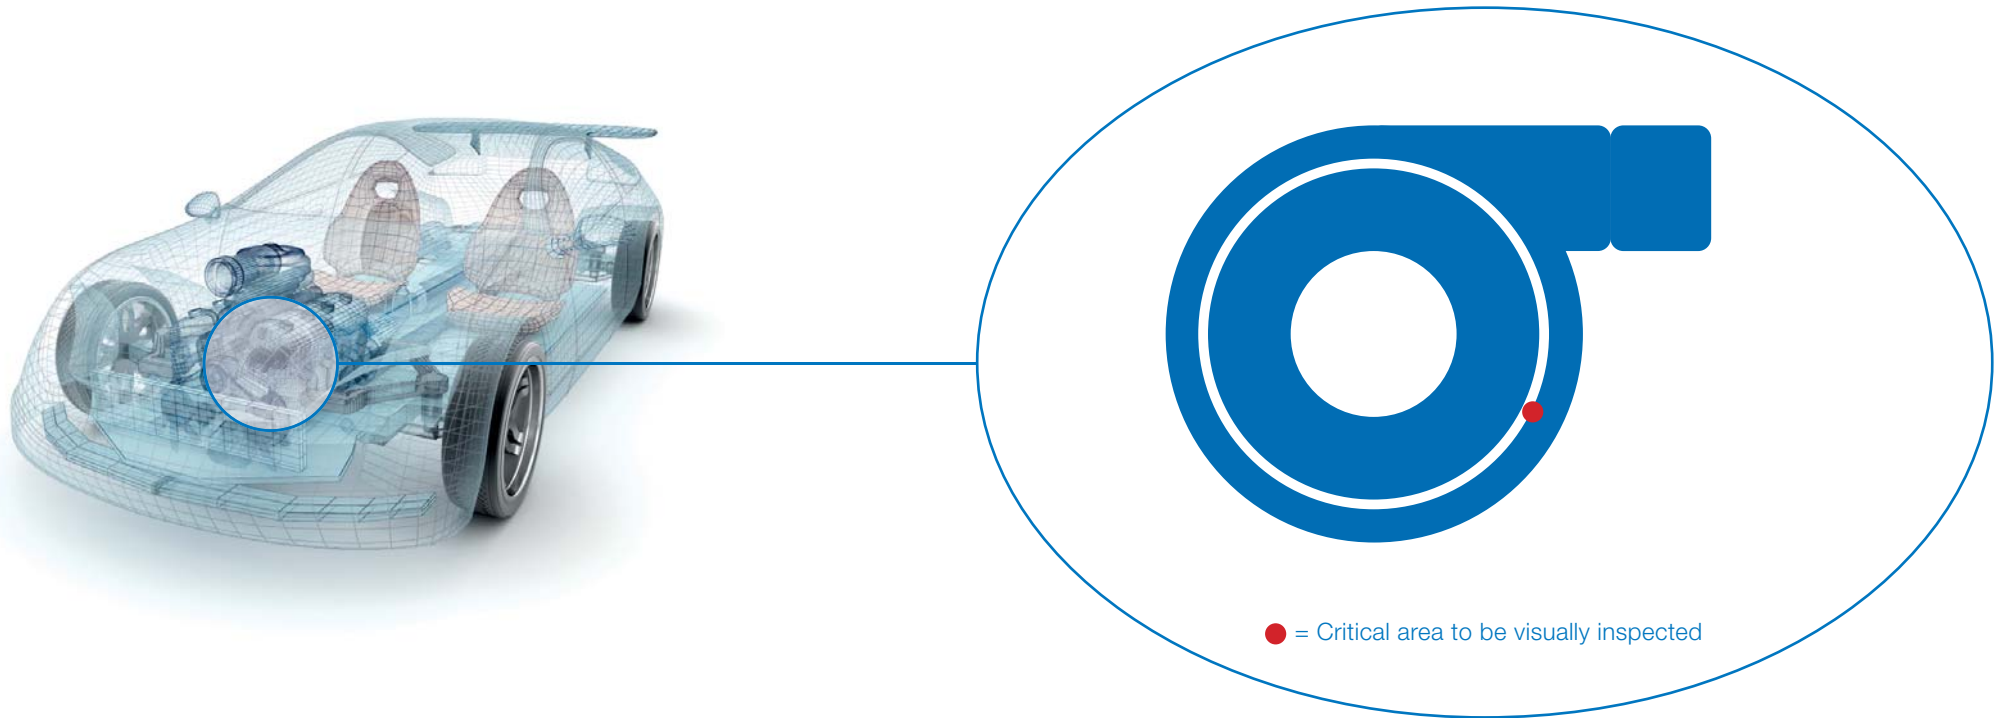
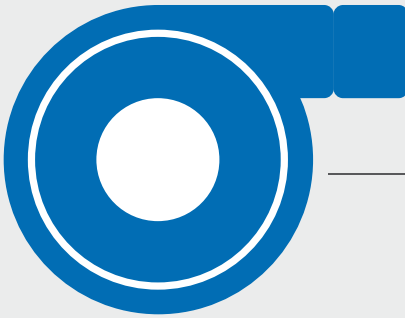



VISUAL INSPECTION IN AUTOMOTIVE TURBO CHARGER/COMPRESSOR HOUSING

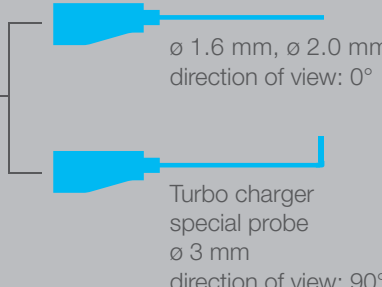

Compressor housing

	Inspection area	Defect	Probe
	Cavity	Sand / chip / casting residues	 <p> ø 1.6 mm, ø 2.0 mm direction of view: 0° Turbo charger special probe ø 3 mm direction of view: 90° </p>

 FlexiScope 2 and 3 probes for visual inspections
 Fitting product: inspection system FlexiVision 100 with FlexiScope 3 camera handpiece